



1155 E. Bianchi Rd
Stockton, CA 95210
(209) 477-4404
americaneventrentals.com

Cotton Candy Machine

Operating Instructions:

1. Plug in floss machine.
2. Flip "MOTOR SWITCH" to "ON" position.
3. WITH MOTOR RUNNING, fill floss head about 90% full with sugar (DO NOT OVER FILL). While filling there may be a vibration type noise until the head is full. Whenever you add sugar to the floss head, always fill it about 90% full. This is necessary to obtain a balanced condition in the floss head and eliminate excessive vibration. NEVER ADD SUGAR WHEN MOTOR IS NOT RUNNING, AS THIS CAUSES EXCESSIVE WEAR ON MOTOR BEARINGS WHEN MOTOR IS STARTED AND "VOIDS WARRANTY".
4. Flip "HEAT SWITCH" to "EMERGENCY" position. This is for fast warm up. Turn heat control up until voltmeter indicator arrow moves into the red start area.
5. The machine should begin to make floss in a matter of a few seconds. After floss is being produced, place heat switch in normal position. Adjust HEAT CONTROL until voltmeter indicator arrow moves into the green run area.

CAUTION: NEVER OPERATE EQUIPMENT FOR A PROLONGED PERIOD WITH THE HEAT CONTROL IN A POSITION THAT CAUSES THE SUGAR TO SMOKE. THIS WILL RESULT IN EXCESSIVE CARBONIZATION OF THE RIBBONS OR HEAT ELEMENTS. IF YOU SMELL BURNING SUGAR OR SMOKE, REDUCE HEAT.

6. Once you find the ideal setting for the heat control, you should be able to operate near this same position each time.
7. Read section in this manual on MAKING FLOSS before going into full production.

THIS MACHINE IS NOT TO BE RUN ON A GENERATOR