



1155 E. Bianchi Rd
Stockton, CA 95210
(209) 477-4404
americaneventrentals.com

Margarita Machine

Setup Instructions

1. Confirm that feet of acrylic bowls are seated in place. Seat if needed. (This will prevent the mix from spilling).
2. Combine ingredients in a mix bucket using one part mix to three parts water. Let us know if you are using your own recipe, as the machines are sensitive to ingredients in some mixes. (we do not guarantee performance of the machine if our mix is not used. IF YOU ARE USING ALCOHOL, add after mix is frozen for best results.
3. Pour mix in acrylic bowls, DO NOT FILL OVER THE MAX LINE. Remember water expands when it freezes and you may have overflow if you overfill and the machine will take longer to freeze.
4. Place the cover lids on top of the acrylic bowls and plug in the back of the machine. (The lights on some machines may not always work).
5. Plug into a 120v dedicated electrical outlet. Make sure there are no other appliances or instruments plugged into that outlet; this machine uses a lot of power. DO NOT use extension cord(s).
6. Set all controls down to freeze. All switches should be down to the "snow sign" position. The green light (freezing Indicator) on the control panel should turn on within 5 min. Make sure that the white screw near the back of the machine is set to "3".

Controls

"0" means "OFF" and "I" means "ON" on all switches.

Main Power Switch. Operates the entire machine

Light Switch. Operates the lights on the bowl cover.

Auger Switch. Helps to mix ingredients and brings slush toward the front.

Freezing Control Switch. This switch has two operation, on the UP position (water drops) the machine will not freeze the machine will only keep the content cold, on the DOWN position (snow sign) the machine will freeze.

Trouble Shooting

1. MACHINE DOES NOT OPERATE AT ALL:

Check power in Machine (Breaker), Extension Cord and plug

2. MACHINE LEAKING PRODUCT:

Acrylic bowl not seated correctly. Drain all products and inspect tank gasket, re-install if necessary and seat acrylic bowl correctly.

3. THE COMPRESSOR DOES NOT START AND MACHINE WILL NOT FREEZE:

The compressor Green Light should turn on with in 5 minutes from the time the machine is turned "ON". If this does not happen please check the following:

- Automatic Defrost Timer. Make sure the LEFT switch is positioned on the "0" and the RIGHT switch is positioned "RUN", and then press the reset button ("R") with a ball pen.

-Check clearance of 10" on both sides of the machine:

-Check power flow to the machine (see power requirements)

-Check you thermometer, If over 80 degrees or direct sunlight move the machine to cooler place and allow 2 hours to freeze.

-Use only the recommended mixes.

-Make sure both bows are filled and augers turning.

-Set all controls down to freeze. All switches should be down to the (') snow sign the green light (freezing Indicator) on the control panel should turn on within 5 min.

4. MACHINE IS TOO FROZEN:

Acrylic bowl not seated correctly. Drain all products and inspect tank gasket, reinstall if necessary and seat acrylic bowl correctly.

Note: All machines have been tested prior rental. American Event Rentals will not be responsible for any claims due to the misuse of these machines. Please read instruction carefully before operating

Machine pulls a lot of power. Please make sure the outlet you are plugging the machine in to is not overloaded with other items on same circuit.

The longer the extension cord the weaker the power is at the other end.

THIS MACHINE IS NOT TO BE RUN ON A GENERATOR