



1155 E. Bianchi Rd
Stockton, CA 95210
(209) 477-4404
americaneventrentals.com

Spin Art Operating Instructions

CONTROLS AND THEIR FUNCTIONS



On the rear panel near the power cord is the main power ON/OFF switch. A second switch is activated when the lid is in the down position. During normal operation, the main power switch should be in the ON position. Opening and closing the lid will start or stop the paper tray spinning. CAUTION! - Remember to turn the main power switch to OFF before unplugging the machine.

The artwork may be created in one of two ways.

First Method: Place the 5 x 7 card stock (not included), in the paper tray being sure the edges of the paper are within the tray edges. Squeeze small drops or lines of paint onto the card stock. Multiple colors of paint may be used and are recommended for the best pictures. Close lid of the machine to start the tray spinning. Raise the lid after a few seconds to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

Second Method: Place the 5 x 7 card stock (not included), in the paper tray being sure the edges of the paper are within the tray edges. Close the lid of the machine to start the tray spinning. Squeeze a few drops of paint through the slot in the lid onto the card stock. Multiple colors of paint are recommended for the best pictures. Raise the lid to stop the tray from spinning. When the tray has come to a complete stop, remove the artwork.

THIS MACHINE IS NOT TO BE RUN ON A GENERATOR

	 WARNING
	Never attempt to remove the artwork while the card tray is still spinning to avoid personal injury. Overriding the door safety switch and minor brake mechanism can result in serious injury.