



1155 E. Bianchi Rd
Stockton, CA 95210
(209) 477-4404
americaneventrentals.com

COFFEE MAKER

Operating Instructions

1. Fill Coffee Pot with cold water to desired level
2. Add coffee to basket (see equivalents below).
3. Plug coffee maker into standard electrical outlet
4. When coffee has finished brewing, remove basket. The pot will keep the coffee hot.

Cleaning Instructions

Rinse out Coffee Pot and basket before returning. **NEVER IMMEDIATELY COFFEE MAKER IN WATER**

Brewing Time

It takes approximately ½ hour to brew coffee in 30 to 60 cup urns and 1 hour in 90 to 100 cup urns.

Coffee Equivalents

Number of Cups	Coffee Measure
30	2 cups
50 to 60	3 ½ cups
90 to 100	4 cups

One pound of coffee is equal to approximately 4 ¾ cups of ground coffee

REMEMBER you are renting this equipment. Be sure you are aware of the terms of your rental contract. Always return your coffee maker clean to avoid additional cleaning charges.

THIS MACHINE IS NOT TO BE RUN ON A GENERATOR